
 



Dimensions of installation (Top view)

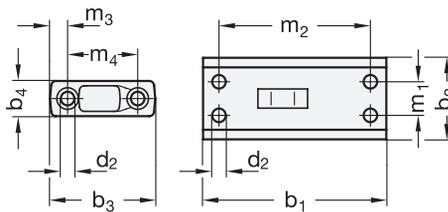


Description of function (for one-hand operation)



To **release**, move the locking mechanism in the direction of the arrow.

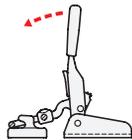


Lift the lever arm until the latch bolt is disengaged from the catch.

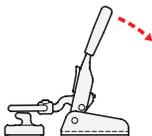

Moving the lever arm back will lift the latch bolt and release the catch (one-hand operation).



For **clamping**, lift the lever arm until the latch bolt rests against the catch.

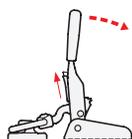

The latch bolt engages with the catch if the locking mechanism is moved upward during clamping.

When clamping in the end position, the mechanism locks automatically through spring tension.

1.1

1.2

1.3

1.4

2.1

2.2

2.3

2.4

