




3.1
3.2
3.3
3.4
3.5

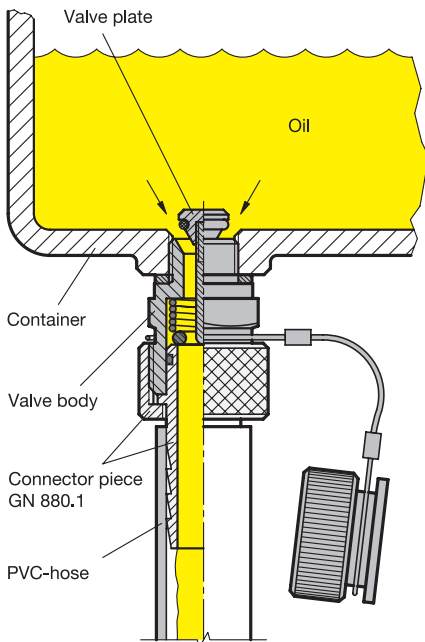

Operation description

After removing the protective cap secured against loss with a retaining cable, turn in the matching connector pieces GN 880.1.

When the connector is screwed in, the valve plate will open and the oil will empty through the hose into a pan.

Take off the connector after the oil has drained. The valve plate will be lowered and closes off the drainage outlet.

The container with the oil drain valve is ready for filling again.

Other benefits of the oil drain valves GN 880:

- No risk of burns caused by hot oil
- No dirt caused by uncontrolled oil drainage
- Quick and easy

3.6
3.7
3.8
3.9

