



- 4 Sensitivity**
 - 6 Angle minutes, bubble move by 2 mm
 - 50 Angle minutes, bubble move by 2 mm
- 5 Type**
 - AV** Aligned, mounting from the front side (not adjustable)
 - JV** Adjustable, mounting from the front side

d ₁	d ₂	d ₃	d ₄	h ₁	h ₂	h ₃	m ₁	m ₂	m ₃
62	3,4	6,3	52	13	9,8	1	18,4	6,7	25,1

Specification	1	3
Housing		
Aluminum		
• Anodized, natural color		● ALN
• Anodized, black		● ALS
Spirit level element		
• Glass plastic body		
• Filling		
Green-transparent		G
Casting compound		
Mineral-based		
RoHS		
On request		
• Filling, colorless-transparent		
• Other sensitivities		

Cross spirit levels GN 2276 are used to check the horizontal position of jigs, machines, devices, appliances and instruments. The spirit levels of type AV are aligned in relation to the reference surface so that the bubbles are centered in the middle of the marking lines once the horizontal position of the contact surface is reached. The spirit levels of type JV are aligned using the fastening holes that are offset by 120°. An alignment ball on the bottom serves as a pivot point. With careful tightening, it is possible to achieve an alignment that places the bubbles between the middle marking lines.

see also...	Page
GN 2283 Screw-On Spirit Levels (for Mounting with Screws)	QVX
GN 2277 Bull's Eye Spirit Levels (with Mounting Flange)	QVX
GN 2280 Bull's Eye Spirit Levels (Adjustable)	QVX

Technical Information	
General Information on Bull's Eye, Screw-On and Cross Spirit Levels	QVX

<p>How to order</p> <p>GN 2276-ALN-62-G-6-JV</p>	1 Material / Finish
	2 d ₁
	3 Filling
	4 Sensitivity
	5 Type