



4 Sensitivity

- 6 Angle minutes, bubble move by 2 mm
- 50 Angle minutes, bubble move by 2 mm

5 Type

- AV Aligned, mounting from the front side (not adjustable)
- JV Adjustable, mounting from the front side

2

d ₁	d ₂	d ₃	d ₄	h ₁	h ₂	h ₃	m ₁	m ₂	m ₃
62	3,4	6,3	52	13	9,8	1	18,4	6,7	25,1

Specification

- Housing
 - Aluminum
 - Anodized, natural color ● ALN
 - Anodized, black ● ALS
- Spirit level element
 - Glass body
 - Filling
 - Green-transparent ● G
- Casting compound
 - Mineral-based
- RoHS

On request

- Filling, colorless-transparent
- Other sensitivities

Information

Cross spirit levels GN 2276 are used to check the horizontal position of jigs, machines, devices, appliances and instruments.

The spirit levels of type AV are aligned in relation to the reference surface so that the bubbles are centered in the middle of the marking lines once the horizontal position of the contact surface is reached.

The spirit levels of type JV are aligned using the fastening holes that are offset by 120°. An alignment ball on the bottom serves as a pivot point. With careful tightening, it is possible to achieve an alignment that places the bubbles between the middle marking lines.

see also...

- General Information on Bull's Eye, Screw-On and Cross Spirit Levels → Page 315
- Screw-On Spirit Levels GN 2283 (for Mounting with Screws) → Page 324
- Bull's Eye Spirit Levels GN 2277 (with Mounting Flange) → Page 316
- Bull's Eye Spirit Levels GN 2280 (Adjustable) → Page 321

How to order

1	Material / Finish
2	d ₁
3	Filling
4	Sensitivity
5	Type

GN 2276-ALN-62-G-6-JV