


Application example

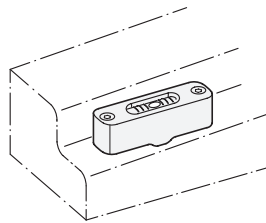

4 Sensitivity

- 6 Angle minutes, bubble move by 2 mm
- 50 Angle minutes, bubble move by 2 mm

5 Type

- AV Aligned, mounting from the front side (not adjustable)
- JV Adjustable, mounting from the front side

2

Length l	b	d ₁	d ₂	h ₁	h ₂	h ₃	m
54	15,5	3,4	6,3	14,5	11,3	1	45

Specification

Housing

- Aluminum
- Anodized, natural color
- Anodized, black

- ALN
- ALS

Spirit level element

- Glass plastic body
- Filling
- Green-transparent

G

Casting compound

Mineral-based

RoHS

On request

- Filling, colorless-transparent
- Other sensitivities

Screw-on spirit levels GN 2283 are used to check the horizontal position of jigs, machines, devices, appliances and instruments.

The spirit levels of type AV are aligned in relation to the reference surface so that the bubble is centered in the middle of the marking lines once the horizontal position of the contact surface is reached.

The spirit levels of type JV are aligned during installation using the fastening holes. An alignment guide on the bottom serves as a pivot point. With careful tightening, it is possible to achieve an alignment that places the bubble between the middle marking lines.

see also...

	Page
GN 2276 Cross Spirit Levels (for Mounting with Screws)	QVX
GN 2282 Screw-On Spirit Levels (for Mounting with Screws)	QVX
GN 2277 Bull's Eye Spirit Levels (with Mounting Flange)	QVX

Technical Information

General Information on Bull's Eye, Screw-On and Cross Spirit Levels	QVX
---	-----

How to order

1	Material / Finish
2	Length l
3	Filling
4	Sensitivity
5	Type

GN 2283-ALS-54-G-50-AV