
# **Locking Plungers**

Plunger Pin in Normal Position Retracted



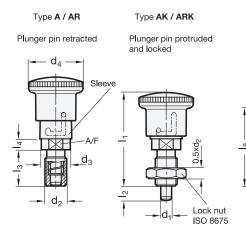

Type B Plunger pin retracted Plunger pin protruded and locked Sleeve  $d_5$  $d_6$ 



With knob, sleeve black, without lock nut

With knob. sleeve black, with lock nut

With knob, sleeve red without lock nut

ARK With knob, sleeve red, with lock nut

With key, sleeve black, without lock nut

With key, sleeve black with lock nut

<b>d</b> <sub>1</sub> Pin -0.05	d <sub>2</sub>	$d_3$	$d_4$	$d_5$	d <sub>6</sub>	I₁ ≈	l <sub>2</sub>	l <sub>3</sub>	I <sub>4</sub> ≈	I <sub>5</sub>	A/F	Spring load in N $\approx$	
Bore +0,15 +0,07												Initial	End
6	M 12 x 1,5	16	28	17	-	51,5	8	20	6	43	14	12	27
8	M 16 x 1,5	18	28	17	20	54,5	10	22	6	48	16	12	35

#### Specification

- Threaded body Steel zinc plated, blue passivated
- Plunger pin Stainless steel AISI 303
- Pressure spring Stainless steel AISI 301

Plastic (Polyamide PA)

- Black, matte finish
- Not removable
- Sleeve

Plastic (Polyamide PA)

- Black, matte or red finish
- Not removable
- Load Rating Information → Page 2132
- Plastic Characteristics → Page 2158
- Stainless Steel Characteristics → Page 2166
- RoHS

#### Accessory

 Key GN 816.1-10 Plastic (Polyamide PA) (All locking plungers have the same keys)

#### Information

If not operated, the plunger of the locking plungers GN 816.1 is retracted. To move out, move against the spring force and hold in the end position by turning by 90°.

The shape of the cam curve secures the plunger against accidental operation.

When operating the button (Type AR / ARK), the visible red covering sleeve indicates the locking status: Indexing pin does not protrude.

For the execution with operation with key (Type B / BK) a key is required to move the plunger. In this execution, a cover sleeve provides additional security and safety from unauthorized removal of the locking plunger. The cover sleeve also provides additional protection against malfunction caused by dirt.

#### see also...

- List of Indexing Plunger Types → Page 884 ff.
- Distance Bushings GN 609.5 (to Limit the Thread Length) → Page 952
- Thin Hex Nuts GN 909 / GN 909.5 → Page 953
- Positioning Bushings GN 412.2 / GN 412.4 → Page 954
- Locking Plungers GN 816 (Plunger Pin in Normal Position Protruded)

→ Page 944




# Locking Plungers Keys GN 816.1-10 / Assembly instruction






## Version with key (Type B / Type BK)

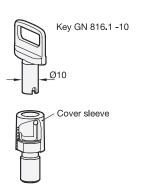

### Assembly instruction

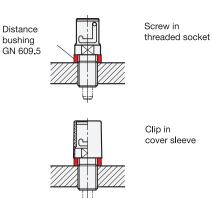

6

3.9

3.6