




1.1
1.2
1.3
1.4

Mounting information

- 1) Drill the handle housing according to the template dimensions reported in the table.
- 2) Remove all drilling burrs before fitting the handle.
- 3) Fit the upper part of the handle into the housing.
- 4) Press onto the lower part until the handle is completely inserted.

2.1
2.2
2.3
2.4

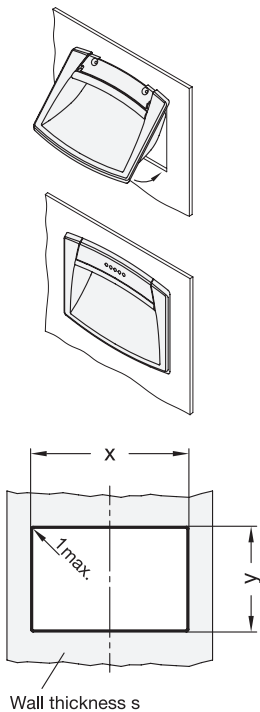

Wall thickness s	für $b_1 = 92$		für $b_1 = 137$	
	$x + 0,2$	$y \pm 0,1$	$x + 0,2$	$y \pm 0,1$
0,7 ... 0,8	87,5	30,5	132	30,5
> 0,8 ... 1,2	87,5	30,7	132	30,7
> 1,2 ... 1,5	87,5	31,7	132	31,7
> 1,5 ... 2	87,5	31,7	132	31,7
> 2 ... 2,2	87,5	31,7	132	31,7

