


1.1
1.2
1.3
1.4

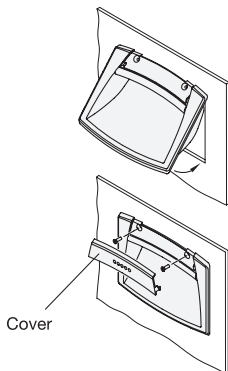


2.1
2.2

Mounting information

- 1) Drill the handle housing according to the template dimensions reported in the table.
- 2) Remove all drilling burrs before fitting the handle.
- 3) Fit the upper part of the handle into the housing and press onto the lower part until firmly in place.
- 4) Gently push the handle downward.
- 5) Fit the two self-tapping screws.
- 6) Assemble the screw cover by pressing on the lateral sides first and finally on the central part.

2.3
2.4
3.10

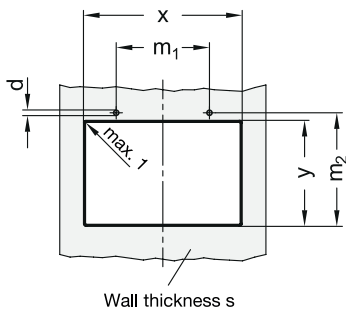

| Wall thickness s | d ±0,02 for self-tapping screw | for M3 | for $b_1 = 110$ | | | | for $b_1 = 120$ | | | |
|-------------------------|---|---|------------------|------------------|------------------------------|------------------------------|------------------|------------------|------------------------------|------------------------------|
| | | | x +0,2 | y +0,5 | m₁ ±0,1 | m₂ ±0,1 | x +0,2 | y +0,5 | m₁ ±0,1 | m₂ ±0,1 |
| 1 ... 1,2 | 2,5 | Core hole drilling 2,5 Through bore-hole 3,2 | 100 | 52 | 64 | 55,5 | 107,5 | 73 | 64 | 76,8 |
| > 1,2 ... 1,5 | 2,55 | | 100 | 52,2 | 64 | 55,5 | 107,5 | 73 | 64 | 77 |
| > 1,5 ... 2 | 2,6 | | 100 | 52,5 | 64 | 56 | 107,5 | 73 | 64 | 77,2 |
| > 2 ... 2,5 | 2,65 | | 100 | 52,7 | 64 | 56,2 | 107,5 | 74 | 64 | 77,5 |
| > 2,5 ... 3 | 2,65 | | 100 | 53 | 64 | 56,5 | 107,5 | 74 | 64 | 77,8 |
| > 3 ... 3,5 | 2,7 | | 100 | 53,2 | 64 | 56,7 | 107,5 | 74 | 64 | 78,1 |
| > 3,5 ... 4 | 2,7 | | 100 | 53,4 | 64 | 56,9 | 107,5 | 75 | 64 | 78,4 |
| > 4 ... 4,5 | 2,7 | | 100 | 53,6 | 64 | 57,1 | 107,5 | 75 | 64 | 78,7 |
| > 4,5 ... 5 | 2,7 | | 100 | 53,8 | 64 | 57,3 | 107,5 | 75 | 64 | 79 |