

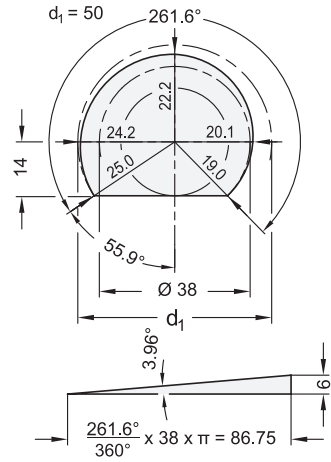
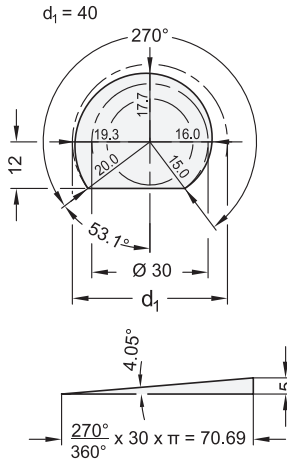
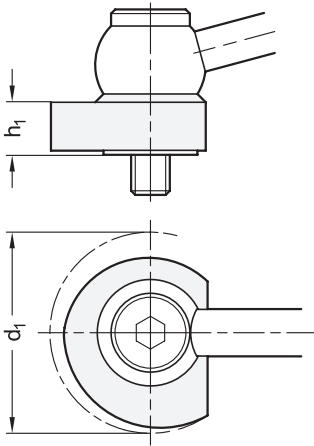
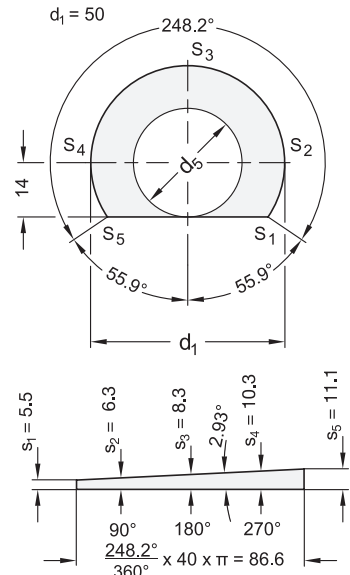





GN 918 / GN 918.5

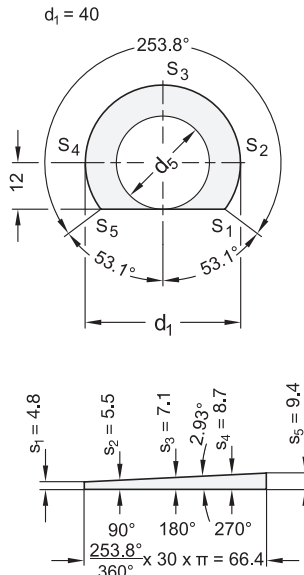

GN 918.1 / GN 918.6

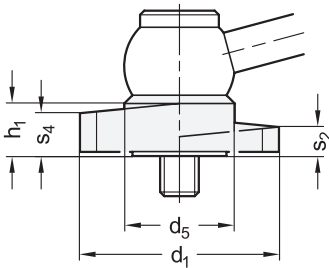


GN 918.2 / GN 918.7

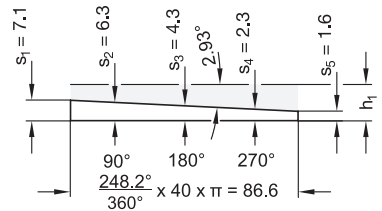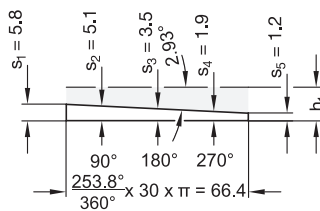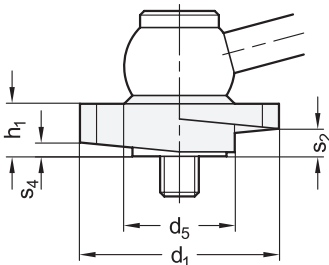


Type KV with clamping direction R (by clockwise rotation) is shown on the drawings as an example.

Technical instructions


Type GV / KV / SK

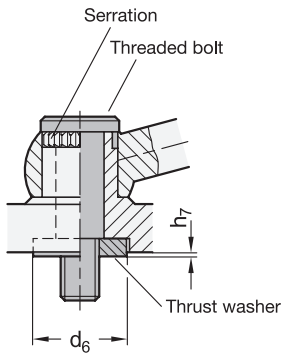

Type GVS / KVS / SKS




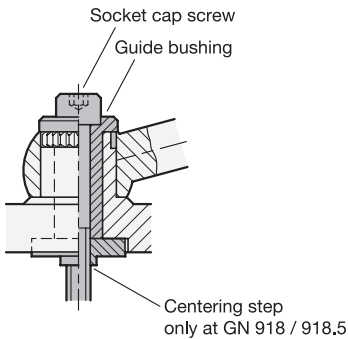


Type GVB / KVB / SKB

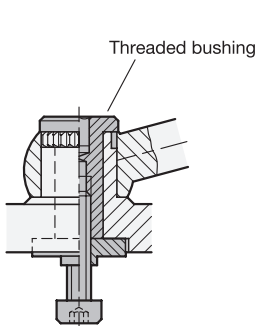

d_1	d_6	$h_7 \approx$
40	20	0,2
50	24	0,2

Application examples

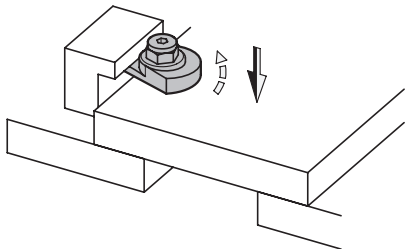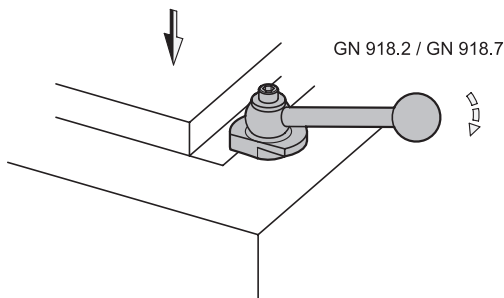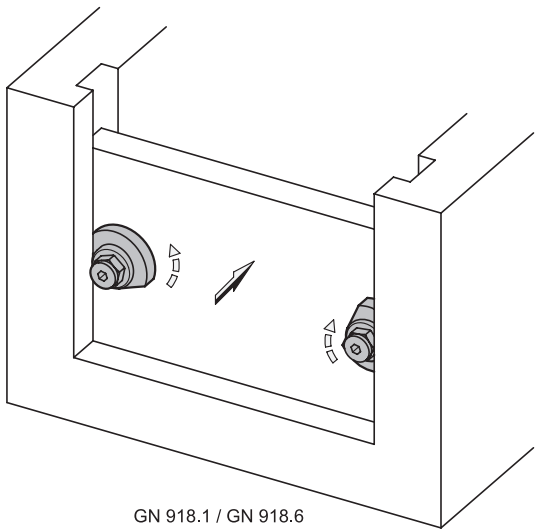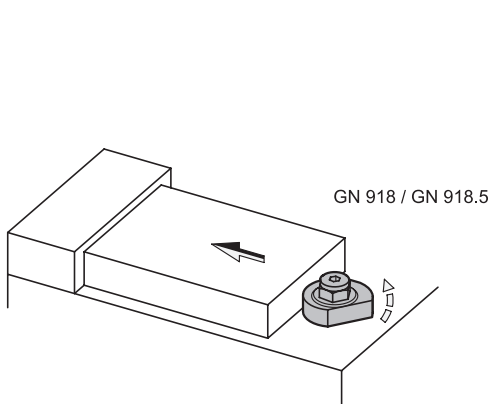

Eccentric Cams / Clamping Bolts

Installation instructions GN 918 ... GN 918.7

